

Easy Printer Patch

by

Walters Software Co.

Copyright (C) 1989

Easy printer patch is an easy way of setting up your ADAM computer to use an Epson compatible dot matrix printer, with SmartWriter or SmartBASIC 1.

1. Set up your dot matrix printer according to the instruction manual that came with your printer, be sure it is set to Epson compatible mode with auto line feed turned off.
2. Check your parallel interface, to be sure it is connected correctly.
3. Turn on your printer, any accessories and then your ADAM computer.
4. Insert the Easy Printer Patch into one of your drives.
5. Pull the computer reset switch toward you.
6. In a moment the entry screen will appear.
7. You have two options, SmartBASIC or SmartWRITER.
8. Push smartkey I to use SmartBASIC or push smartkey II to use SmartWRITER.
9. Remove the Easy Printer Patch media and store in a safe place.
10. If you selected SmartBASIC, (smartkey I), then insert your SmartBASIC media into a drive and push any key, this will boot SmartBASIC in a few seconds. When SmartBASIC is ready, the title, (SmartBASIC), will appear at the top of the screen. Type PR#1 to use your dot matrix printer, when finished type PR#0.
11. If you selected SmartWRITER, (smartkey II), then make sure all medias are removed from your drives and push any key. The Electric typewriter screen will appear, in this mode nothing will be sent to the printer until you push the return key, then the whole line will be printed. Push the escape key to enter SmartWRITER, now everything you want printed will go to your dot matrix printer.

If you have any problems, questions, or software inquiries you may contact us by telephone from 9 A.M. to 1 P.M. eastern time, or write to Walters Software Co, please include a S.A.S.E., (Self - address, stamped envelope), if a reply is requested.

Walters Software Co.
Rd# 4 Box 289-A
Titusville, Pa 16354
Phone 814-827-3776